

**ANALYTICAL INDEX**



<b>A</b>	<b>Ref.</b>	<b>Page</b>
ACTIVATING THE BATTERY	6.14.1	6-44
ADJUSTING THE SWINGING ARM	2.29.1	1-48
ADJUSTING		
REAR SHOCK ABSORBER	2.30.2	1-49
BEARING PLAY	2.27.2	1-45
CO	4.10.5	4-19
DASHBOARD LIGHT	2.3.3	1-8
DRIVE CHAIN	2.35.3	1-55
FRONT BRAKE LEVER		
AND CLUTCH LEVER	2.23	1-42
GEARSHIFT LEVER	2.25	1-43
HORIZONTAL HEADLIGHT BEAM	6.18	6-54
IDLE	2.10.2	1-22
REAR BRAKE LEVER		
CLEARANCE	2.24	1-43
THROTTLE CONTROL	2.10.3	1-23
VERTICAL HEADLIGHT BEAM	6.17	6-53
WHEEL SPOKES TENSION	2.33	1-52
WHEEL SPOKES TENSION	7.2.1	7-54
	7.3.1	7-60
AIR FILTER	2.9	1-20
AIR FILTER CASE, REMOVAL	7.1.6	7-11
AIR TEMPERATURE SENSOR	6.10.2	6-33
AIR THERMISTOR,		
TESTING	6.6.4	6-18
ALTERNATOR		
CHECKING CONTINUITY	6.3.4	6-7
CHECK OPEN-CIRCUIT		
OPERATION	6.3.2	6-6
AUTOMATIC TESTING	4.7.5	4-13
AUXILIARY SYSTEMS, PROBLEMS	8.3.4	8-23

<b>B</b>	<b>Ref.</b>	<b>Page</b>
BATTERY	2.4	1-13
	6.14	6-44
ACTIVATION	6.14.1	6-44
CHECKING	6.14.3	6-46
MAINTENANCE	6.14.2	6-46
PROLONGED INACTIVITY	2.4.3	1-15
RECHARGING	2.4.2	1-15
REMOVAL	7.1.7	7-12
RETURN UNDER WARRANTY	6.14.4	6-46
BATTERY RECHARGING	2.4.2	1-15
PROBLEMS	8.3.2	8-23
BEARINGS		
CHECKING THE CLEARANCE	2.27.1	1-45
ADJUSTING THE CLEARANCE	2.27.2	1-45
BLEEDING THE BRAKE SYSTEMS	2.18	1-35
BLEEDING THE CLUTCH		
CONTROL SYSTEM	2.19	1-39
BODY	7.1	7-4
BRAKE AND CLUTCH CONTROL LINES	2.38	1-59
BRAKE DISCS		
CHECKING	7.4.2	7-69
REMOVAL	7.4.3	7-69
BRAKE DISC		
CHECKING	7.5.2	7-72
REMOVAL	7.5.3	7-72

BRAKE FLUID	1.2.4	1-4
BRAKE MASTER CYLINDER, REMOVAL	7.4.4	7-69
BRAKE MASTER CYLINDER, REMOVAL	7.5.4	7-73
BRAKE MASTER CYLINDER, REMOVAL	7.5.4	7-73
BRAKE PADS,		
CHANGING	7.4.1	7-68
CHECKING WEAR	2.26	1-44
BRAKE PADS, CHANGING	7.5.1	7-71
BRAKE SYSTEMS, BLEEDING	2.18	1-35
BRAKES AND CLUTCH CONTROL, LINES	2.38	1-59
BREAKDOWNS	6.5.2	6-12
BREAKING-IN, RULES	1.3	1-6
BREAKING THE CHAIN	7.10.2	7-97
BREATHER AND OVERFLOW		
DRAINAGE LINES	8.2.9	8-17
BULBS, CHANGING	6.15	6-47

  

<b>C</b>	<b>Ref.</b>	<b>Page</b>
CABLES AND LINES	8.2	8-11
FASTENING	8.2	8-11
PATH	8.2	8-11
CAPACITY - FLUID SPECIFICATIONS	8.4.12	8-25
CARBON MONOXIDE	1.2.7	1-6
CENTER SUPPORT STAND		
POSITIONING THE VEHICLE	1.9.2	1-18
CHAIN		
CHECKING THE WEAR	2.35.2	1-55
BREAKING THE CHAIN	7.10.2	7-97
CHAIN		
BREAKER/RIVET TOOL	7.10.1	7-96
CHAIN HOUSING, REMOVAL	7.1.48	7-49
CHANGING		
FUSES	6.16	6-52
BRAKE PADS	7.4.1	7-68
BRAKE PADS	7.5.1	7-71
BULBS	6.15	6-47
CLUTCH FLUID	2.22	1-42
COOLANT	2.14	1-28
ENGINE OIL AND ENGINE OIL FILTER	2.12	1-25
FORK OIL	7.7.1	7-78
FRONT BRAKE FLUID	2.20	1-40
FRONT DIRECTION		
INDICATOR LAMPS	6.15.2	6-49
HEADLIGHT BULBS	6.15.1	6-47
LICENSE PLATE LAMP BULBS	6.15.5	6-51
REAR BRAKE FLUID	2.21	1-41
REAR DIRECTION		
INDICATOR LAMPS	6.15.3	6-50
TAILLIGHT BULBS	6.15.4	6-51
CHECKING	6.14.3	6-46
AIR THERMISTOR OPERATION	6.6.4	6-18
ALTERNATOR CONTINUITY	6.3.4	6-7
BEARING PLAY	2.27.1	1-45
BRAKE DISC	7.5.2	7-72
BRAKE DISCS	7.4.2	7-69
CLEARANCE	2.35.1	1-54
COMPONENTS	7.2.4	7-57
	7.3.6	7-65
	7.6.2	7-76

	7.7.4	7-82	COMPLETE WHEEL, REMOVAL	7.2.2	7-55
	7.8.3	7-89			
	7.9.4	7-95	COMPONENTS, CHECKING	7.2.4	7-57
CRANKSHAFT POSITION SENSOR	6.6.7	6-21		7.3.6	7-65
DIODE	6.8.4	6-27		7.6.2	7-76
DIODE MODULE	6.8.6	6-29		7.7.4	7-82
ELECTRIC FAN OPERATION	6.9.2	6-31		7.8.3	7-89
ELECTRICAL SYSTEM	8.3	8-23		7.9.4	7-95
	8.4	8-24	CONNECTIONS TO THE ELECTRONIC CONTROL UNIT	6.6	6-14
FUEL INTAKE	4.1.2	4-4	CONSUMABLES	1.7	1-11
FUEL PUMP	6.7.2	6-23	COOLANT	1.2.5	1-5
FUEL PUMP RELAY	6.7.3	6-23	CHANGING	2.14	1-28
IGNITION COILS	6.6.6	6-20	CHECKING AND TOPPING UP	2.13	1-27
INJECTION RELAY	6.4.3	6-10	TEMPERATURE SENSOR	6.10.6	6-37
INJECTORS	6.6.1	6-16	WARNINGS	1.2	1-3
LIGHT RELAY	6.11.2	6-39	COOLANT, FLUID	1.2.5	1-5
OPEN-CIRCUIT OPERATION			COOLANT THERMISTORS, TESTING	6.6.5	6-19
ALTERNATOR	6.3.2	6-6	REMOVAL	5.4	5-7
OVERTURN SENSOR	6.4.4	6-10	COOLING SYSTEM LINES	8.4.7	8-25
REAR SUSPENSION LINKAGE	2.30.3	1-50		2.39	1-59
RECHARGING SYSTEM	6.3	6-6	COOLING SYSTEM LINES	8.2.6	8-14
RECHARGING VOLTAGE	6.3.1	6-6	COOLING SYSTEM LINES	2.39	1-59
SAFETY SYSTEM SWITCHES	6.8.7	6-30	CRANKSHAFT POSITION SENSOR, CHECKING	6.6.7	6-21
SIDE STAND SWITCH	6.8.5	6-28	CYLINDERS, SYNCHRONIZING	4.10.4	4-18
STARTING RELAY	6.8.3	6-26			
THERMISTOR OPERATION			<b>D</b>	<b>Ref. Page</b>	
COOLANT	6.6.5	6-19	DAMPER ABSORBER REMOVAL	2.30.2	1-49
THROTTLE VALVE POTENTIOMETER	6.6.3	6-17		7.9.1	7-92
VOLTAGE REGULATOR	6.3.5	6-8	DASHBOARD		
WEAR ON CHAIN, SPROCKET AND COUNTERSHAFT SPROCKET	2.35.2	1-55	ADJUSTING THE LIGHTS	2.3.3	1-8
CHECKING AND CLEANING THE TERMINALS	2.4.1	1-14	REMOVAL	7.1.21	7-25
CHECKING AND TOPPING UP CLUTCH FLUID	2.17	1-33	DASHBOARD/FRONT FAIRING MOUNT, REMOVAL	7.1.28	7-32
COOLANT	2.13	1-27	DASHBOARD INDICATORS	6.10	6-32
FRONT BRAKE FLUID	2.15	1-29	DASHBOARD PANEL, REMOVAL	7.1.20	7-24
REAR BRAKE FLUID	2.16	1-31	DISASSEMBLY		
CHECKING AND TOPPING UP THE ENGINE OIL LEVEL	2.11	1-24	SUSPENSION LINKAGE	7.9.3	7-94
CHECKING THE BRAKE PAD WEAR	2.26	1-44	DRIVE CHAIN	7.10	7-96
CHECKING THE OPERATION OF THE THROTTLE CONTROL	2.10.1	1-22	FINAL DRIVE ASSEMBLY	7.3.4	7-63
CHOKE MOTOR	6.6.2	6-16	FORK	7.8.2	7-88
CLEANING AND LUBRICATION	2.41.1	1-66	STEERING	7.6.1	7-75
	2.35.4	1-56	THROTTLE BODY	4.9	4-16
CLOCK, SETTING (HOURS AND MINUTES)	2.3.6	1-10	UPPER/LOWER FORK TUBE UNITS	7.7.3	7-79
CLUTCH CONTROL FLUID	1.2.6	1-5	WHEEL	7.2.3	7-56
CLUTCH CONTROL FLUID REMOVAL	7.1.10	7-15		7.3.5	7-64
CLUTCH CONTROL LINE	8.2.4	8-13	DRAINING FUEL FROM THE TANK	4.2	4-5
CLUTCH CONTROL SYSTEM, BLEEDING	2.19	1-39		2.8	1-19
CLUTCH CYLINDER, REMOVAL	3.2.1	3-6	DRIVE CHAIN SHOE INSPECTION	2.35.6	1-57
CLUTCH FLUID	1.2.6	1-5	REMOVAL	7.1.49	7-50
CHECKING AND TOPPING UP	2.17	1-33	DRIVE		
CHANGING	2.22	1-42	CHAIN GUIDE PLATE, INSPECTION	2.35.5	1-57
CLUTCH LEVER, ADJUSTING	2.23	1-42	DESCRIPTION	5.1	5-3
CO, ADJUSTING	4.10.5	4-19	DIODE, CHECKING	6.8.4	6-27
			DRIVE CHAIN	2.35	1-53

ADJUSTING	2.35.3	1-55
DISASSEMBLY	7.10	7-96
DIODE MODULE, CHECKING	6.8.6	6-29
DIRECTION INDICATORS	7.1.24	7-28

**E Ref. Page**

ELECTRIC COOLING FAN	6.9	6-31
ELECTRIC COOLING FAN REMOVAL	5.3	5-6
ELECTRIC COOLING FANS WIRING DIAGRAM	6.9.1	6-31
ELECTRIC FAN CHECKING OPERATION	6.9.2	6-31
ELECTRICAL CABLES	8.2.10	8-18
ELECTRICAL COMPONENTS POSITIONING	2.5 6.1	1-15 6-3
ELECTRICAL CONNECTORS	6.2.2	6-5
ELECTRICAL CONTROLS ON THE LEFT HANDLEBAR, REMOVAL	7.1.11	7-16
ELECTRICAL CONTROLS ON THE RIGHT HANDLEBAR, REMOVAL	7.1.14	7-19
ELECTRICAL SYSTEM CHECKING	8.4.4 8.3 8.4	8-24 8-23 8-24
ELECTRONIC CONTROL UNIT CONNECTORS	4.7.44-12	
CONNECTIONS	6.6	6-14
CONNECTORS REMOVAL	4.7.4 7.1.8	4-12 7-13
ELECTRONIC CONTROL UNIT CONNECTIONS	6.6	6-14
ELECTRONIC SYSTEM, TROUBLESHOOTING ACCORDING TO INFORMATION	6.5.4	6-13
ENGINE	8.4.1	8-24
INSTALLATION ON THE FRAME	3.4	3-15
NUMBER OF	1.1.2	1-3
OIL	1.2.2	1-4
REMOVAL FROM THE FRAME	3.3	3-7
ENGINE COMPONENTS THAT MAY BE DISASSEMBLED WITHOUT REMOVING THE ENGINE FROM THE FRAME	3.2	3-4
ENGINE MANAGEMENT	4.7	4-8
ENGINE NUMBER	1.1.2	1-3
ENGINE OIL	1.2.2	1-4
CHANGING	2.12	1-25
ENGINE OIL FILTER, CHANGING	2.12	1-25
ENGINE OIL LEVEL AND TOPPING UP, TESTING	2.11	1-24
ENGINE OIL LINES	8.2.8	8-16
ENGINE OIL PRESSURE SENSOR	6.10.3	6-34
ENGINE OIL RADIATOR, REMOVAL	7.1.47	7-49
ENGINE OIL RESERVOIR, REMOVAL	7.1.46	7-48
ENGINE TOOLS	1.8.2	1-16
ETV MILLE CAPONIRD	6.19	6-55

EXHAUST MANIFOLD NUTS	2.34	1-53
EXHAUST PIPES, REMOVAL	7.1.44	7-46
EXHAUST SILENCER, REMOVAL	7.1.43	7-45
EXPANSION TANK, REMOVAL	5.6	5-9
EXTENDED BATTERY STORAGE	2.4.3	1-15

**F Ref. Page**

FASTENERS	2.41	1-61
FAULT CODES TEST	6.5.3	6-12
FAULT CODES, TESTING	6.5.3	6-12
FINAL DRIVE ASSEMBLY, DISASSEMBLY	7.3.4	7-63
FLASHER TEST	6.12.3	6-41
FLUID, BRAKES	1.2.4	1-4
FORK OIL CHANGING	1.2.3 7.7.1	1-4 7-78
FORK TUBES, REMOVAL	7.7.2	7-78
FORK, RE-INSTALLING	7.8.4	7-90
REMOVAL	7.8.1	7-86
DISASSEMBLY	7.8.2	7-88
FORK, OIL	1.2.3	1-4
FORK TUBES, REMOVAL DISASSEMBLY	7.7.2 7.7.3	7-78 7-79
FRAME, NUMBER	1.1.1	1-3
FRAME, REMOVAL	7.1.51	7-52
FRONT BRAKE FLUID, CHECKING AND TOPPING UP CHANGING	2.15 2.20	1-29 1-40
FRONT BRAKE LEVER ADJUSTING	2.23	1-42
FRONT BRAKE LINES	8.2.1	8-11
FRONT BRAKE SYSTEM	8.4.5	8-24
FRONT BRAKES	7.4	7-67
FRONT DIRECTION INDICATOR LAMPS, CHANGING	6.15.2	6-49
FRONT FAIRING, REMOVAL	7.1.18	7-22
FRONT FORK	7.7	7-77
FRONT MUDGUARD, REMOVAL	7.1.23	7-27
FRONT SUSPENSION	2.28.1	1-47
	8.4.9	8-25
FRONT WHEEL	2.31	1-51
	7.2	7-54
FUEL		
WARNINGS	1.2	1-3
DRAINING		
FROM THE TANK	2.8	1-19
LINES	2.37	1-59
FUEL	1.2.1	1-3
FUEL DELIVERY FILTER REMOVAL	4.5	4-6
FUEL INJECTION		

WIRING DIAGRAM	6.4.1	6-9	REMOVAL	7.1.15	7-20
FUEL LEVEL SENSOR REMOVAL	6.10.5 4.4	6-36 4-6	IGNITION/INJECTION SYSTEM	6.5	6-11
FUEL LINES	2.37	1-59	INDICATORS, TABLE	2.3.7	1-10
FUEL PUMP RELAY, CHECKING	6.7.3	6-23	INJECTION RELAY, CHECKING	6.4.3	6-10
FUEL PUMP SYSTEM	6.7	6-22	INJECTION SYSTEM	6.4	6-9
FUEL PUMP, REMOVAL	4.6	4-7	INJECTION SYSTEM DIAGRAM	4.7.3	4-11
REMOVING THE COMPLETE BODY	4.3	4-5	INJECTORS, CHECKING	6.6.1	6-16
FUEL PUMP, CHECKING	6.7.2	6-23	REMOVAL	4.8.2	4-15
FUEL PUMP RELAY, CHECKING	6.7.3	6-23	TESTING	4.10.1	4-17
FUEL SYSTEM	8.4.3	8-24	INSPECTION		
FUEL SYSTEM LINES	8.2.3	8-12	THROTTLE BODY	4.10	4-17
FUEL TANK	4.1	4-3	DRIVE CHAIN SHOE	2.35.6	1-57
FUEL TANK CAP, REMOVAL	7.1.5	7-10	DRIVE CHAIN GUIDE PLATE	2.35.5	1-57
FUEL TANK, REMOVAL	7.1.4	7-8	FRONT SUSPENSION	2.28	1-47
FUSES, CHANGING	6.16	6-52	REAR SUSPENSION	2.30	1-49
<b>G</b>	<b>Ref. Page</b>		INSTALLING THE UPPER/LOWER FORK TUBE UNITS	7.7.6	7-85
GEARSHIFT LEVER, ADJUSTING	2.25	1-43	INSTALLING THE COMPLETE ENGINE ON THE FRAME	3.4	3-15
GEARSHIFT LEVER, REMOVING	7.1.41	7-43	INSTRUCTIONS FOR APPLYING THE TRANSFERS	1.10	1-19
GENERAL INSTRUCTIONS FOR MAINTENANCE AND REPAIRS	3.1.9	3-3	INSTRUMENTS, TABLE	2.3.7	1-10
GENERAL SPECIFICATIONS OF TIGHTENING TORQUES	1.11	1-21	INTRODUCTION	6.2	6-5
GENERAL INFORMATION	4.7.1	4-8	<b>J</b>	<b>Ref. Page</b>	
<b>H</b>	<b>Ref. Page</b>		JUMP-STARTING	2.6	1-16
HANDLEBAR, REMOVAL	7.1.16	7-21	JUMPER CABLES, STARTING	2.6	1-16
HEADLIGHT BEAM, HORIZONTAL ADJUSTMENT	6.18	6-54	<b>K</b>	<b>Ref. Page</b>	
HEADLIGHT BEAM, VERTICAL ADJUSTMENT	6.17	6-53	KNOB ON THE LEFT HANDLEBAR, REMOVING	7.1.9	7-14
HEADLIGHT BULBS, CHANGING	6.15.1	6-47	KNOB, REMOVING FROM THE LEFT HANDLEBAR	7.1.9	7-14
HEADLIGHT, REMOVAL	7.1.22	7-26	<b>L</b>	<b>Ref. Page</b>	
HIGH-TEMPERATURE COMPONENTS	1.2.8	1-6	LEFT HANDLEBAR ELECTRICAL CONTROLS, REMOVAL	7.1.11	7-16
HIGH TEMPERATURES COMPONENTS	1.2.8	1-6	LEFT RIDER FOOTREST SUPPORT, REMOVAL	7.1.38	7-42
HORN, REMOVAL	7.1.27	7-31	LEGEND	2.3.1	1-8
HORN TEST	6.12.2	6-41	LICENSE PLATE HOLDER, REMOVAL	7.1.36	7-40
<b>I</b>	<b>Ref. Page</b>		LICENSE PLATE LAMP BULBS, CHANGING	6.15.5	6-51
IGNITION AND/OR STARTING, PROBLEMS	8.3.3	8-23	LIGHT RELAY, CHECKING	6.11.2	6-39
IGNITION COILS, CHECKING	6.6.6	6-20	LIGHT SYSTEM	6.11	6-38
IGNITION SAFETY SYSTEM INSPECTION	6.8 2.28	6-24 1-47	LIGHTS, ADJUSTING DASHBOARD	2.3.3	1-8
	8.4.10	8-25	LOCATION OF SERIAL NUMBERS CHECKING	1.1 6.6.3	1-3 6-17
IGNITION SWITCH/STEERING LOCK,			LOCATIONS OF ELECTRICAL COMPONENT	6.1	6-3
			LOCKING/RELEASING THE PASSENGER SADDLE PASSENGER	7.1.1	7-6
			LOWER FRONT PANEL		

REMOVAL	7.1.29	7-33
LOWER PANEL	7.1.29	7-33
LOWER SADDLE PANEL, REMOVAL	7.1.35	7-38
LUBRICANT TABLE	1.6	1-10
LUBRICANTS	3.1.5	3-3
WARNINGS	1.2	1-3
TABLES	1.6	1-10
LUBRICATION POINTS	2.2	1-7

**M** **Ref. Page**

MAINTENANCE	4.1.1	4-4
	6.14.2	6-46
MAINTENANCE AND REPAIRS, GENERAL INSTRUCTIONS	3.1.9	3-3
PRECAUTIONS TO OBSERVE	3.1.8	3-3
MAINTENANCE INTERVALS	3.1.2	3-3
MASTER LINK, POSITIONING	7.10.3	7-98
MINIMUM, ADJUSTING	2.10.2	1-22
MISCELLANEOUS TOOLS	1.8.1	1-15
MULTIFUNCTION COMPUTER	2.3	1-8

**O** **Ref. Page**

OTHER COMPONENTS, WARNINGS	1.2	1-3
OVERTURN SENSOR, CHECKING	6.4.4	6-10

**P** **Ref. Page**

PARTS, SPARE	1.4	1-7
PASSENGER FOOTREST, REMOVAL	7.1.37	7-41
PASSENGER FOOTREST SUPPORTS, REMOVAL	7.1.37	7-41
PASSENGER SADDLE LOCK, REMOVAL	7.1.32	7-35
PASSENGER SADDLE, LOCKING/RELEASING	7.1.1	7-6
PATH, FASTENING, WIRING, CABLES AND LINES	8.2	8-11
PINS, RIVETING	7.10.4	7-99
POSITIONING THE MASTER LINK	7.10.3	7-98
POSITIONING THE VEHICLE ON THE CENTER SUPPORT STAND	1.9.2	1-18
POSITIONING THE VEHICLE ON THE SUPPORT STANDS	1.9	1-17
POSITIONING THE VEHICLE ON THE FRONT SUPPORT STAND	1.9.1	1-17
POWER SUPPLY		
FUEL, CHECKING	4.1.2	4-4
ELECTRICAL, INJECTION DIAGRAM	6.4.1	6-9
PRECAUTIONS TO OBSERVE WHEN CARRYING OUT MAINTENANCE AND REPAIRS	3.1.8	3-3
PRESSURE LINES FOR PPC DEVICE	8.2.5	8-13
PROBLEMS		

WITH IGNITION AND/OR STARTING	8.3.3	8-23
WITH BATTERY RECHARGING	8.3.2	8-23
AUXILIARY SYSTEMS	8.3.4	8-23
PRODUCTS, CONSUMER	1.7	1-11
PRODUCTS, SPECIFICATIONS	1.7.1	1-11
USE	1.7.2	1-12
PROGRAMMING KEYS	2.3.2	1-8

**R** **Ref. Page**

RADIATOR, REMOVAL	5.2	5-5
RADIATOR SPOILER, REMOVAL	7.1.26	7-30
REAR BRAKE	7.5	7-70
REAR BRAKE FLUID, CHECKING AND TOPPING UP	2.16	1-31
CHANGING	2.21	1-41
REAR BRAKE LEVER, ADJUSTING THE CLEARANCE	2.24	1-43
REMOVAL	7.1.42	7-44
REAR BRAKE LINES	8.2.2	8-11
REAR BRAKE SYSTEM	8.4.6	8-24
REAR DIRECTION INDICATOR LAMPS, CHANGING	6.15.3	6-50
REAR DIRECTION INDICATORS, REMOVAL	7.1.34	7-37
REAR GRAB HANDLE, REMOVAL	7.1.31	7-34
REAR HOUSING, REMOVAL	7.1.50	7-51
REAR SUSPENSION	2.30.1	1-49
RE-INSTALLING THE SWINGING ARM	7.8.4	7-90
REAR SUSPENSION	7.9	7-92
CHECKING LINKAGE	2.30.3	1-50
INSPECTION	2.30	1-49
REAR SUSPENSION LINKAGE, REMOVAL	7.9.2	7-93
	2.33	1-52
REAR WHEEL	2.32	1-51
	7.3	7-60
REARVIEW MIRRORS, REMOVAL	7.1.17	7-21
REASSEMBLING THE STEERING	7.6.3	7-76
REASSEMBLY LOWER FORK TUBE UPPER/LOWER FORK TUBES	7.7.5	7-83
RECHARGING SYSTEM, CHECKING	6.3	6-6
RECHARGING SYSTEM DIAGRAM	6.3.3	6-7
RECHARGING SYSTEM, DIAGRAM	6.3.3	6-7
RECHARGING VOLTAGE, CHECKING	6.3.1	6-6
RE-INSTALLING THE WHEEL	7.2.5	7-58
	7.3.7	7-66
REMOVAL		
DAMPER ABSORBER	7.9.1	7-92
AIR FILTER CASE	7.1.6	7-11
BATTERY	7.1.7	7-12
BRAKE DISC	7.5.3	7-72
BRAKE DISCS	7.4.3	7-69
CHAIN HOUSING	7.1.48	7-49
CLUTCH CONTROL	7.1.10	7-15

CLUTCH CYLINDER	3.2.1	3-6	RADIATOR SPOILER	7.1.26	7-30
COMPLETE ENGINE FROM THE FRAME	3.3	3-7	REAR HOUSING	7.1.50	7-51
COMPLETE FUEL PUMP ASSEMBLY	4.3	4-5	REARVIEW MIRRORS	7.1.17	7-21
COMPLETE GEARSHIFT LEVER	7.1.41	7-43	RIDER FOOTREST	7.1.40	7-43
DASHBOARD	7.1.21	7-25	RIDER SADDLE	7.1.2	7-6
DASHBOARD PANEL	7.1.20	7-24	RIGHT RIDER FOOTREST SUPPORT	7.1.39	7-42
DRIVE CHAIN SHOE	7.1.49	7-50	SADDLE LOCK	7.1.32	7-35
ELECTRIC COOLING FAN	5.3	5-6	THERMOSTAT VALVE	5.5	5-8
ELECTRICAL CONTROLS LEFT HANDLEBAR	7.1.11	7-16	UPPER/LOWER FORK TUBE UNITS	7.7.2	7-78
ELECTRICAL CONTROLS ON THE RIGHT HANDLEBAR	7.1.14	7-19	RETURN UNDER WARRANTY	6.14.4	6-46
ELECTRICAL CONTROLS ON THE LEFT HANDLEBAR	7.1.11	7-16	RIDER FOOTREST, REMOVAL	7.1.40	7-43
ELECTRONIC CONTROL UNIT	7.1.8	7-13	RIDER SADDLE, REMOVING	7.1.2	7-6
FORK	7.8.1	7-86	RIGHT RIDER FOOTREST SUPPORT, REMOVAL	7.1.39	7-42
FRONT BRAKE CONTROL	7.1.13	7-18	RIVETING THE PINS	7.10.4	7-99
FRONT DIRECTION INDICATORS	7.1.24	7-28			
FRONT FAIRING	7.1.18	7-22	<b>S</b>	<b>Ref. Page</b>	
FRONT MUDGUARD	7.1.23	7-27	SADDLE LOCK, REMOVAL	7.1.32	7-35
FUEL DELIVERY FILTER	4.5	4-6	SADDLE SUPPORT LOWER MOLDED COVER, REMOVAL	7.1.33	7-36
HANDLEBAR	7.1.16	7-21	SAFETY SYSTEM SWITCHES, CHECKING	6.8.7	6-30
HEADLIGHT	7.1.22	7-26	SCHEDULED MAINTENANCE, PLAN CHART	2.1	1-4
HORN	7.1.27	7-31		2.1.1	1-5
IGNITION SWITCH/STEERING LOCK	7.1.15	7-20	SCHEDULED MAINTENANCE CHART	2.1.1	1-5
INJECTORS	4.8.2	4-15	SCHEDULED MAINTENANCE PLAN	2.1	1-4
KNOB ON THE LEFT HANDLEBAR	7.1.9	7-14	SEALANTS	3.1.4	3-3
LOWER FRONT PANEL	7.1.29	7-33	SENSOR ALIGNMENT THROTTLE VALVE POSITION	4.10.6	4-21
LOWER SADDLE PANEL	7.1.35	7-38	SENSORS	4.7.2	4-9
REAR BRAKE LEVER	7.1.42	7-44	SERIAL, NUMBER LOCATION	1.1	1-3
REAR DIRECTION INDICATORS	7.1.34	7-37	SETTING THE CLOCK (HOURS AND MINUTES)	2.3.6	1-10
REAR GRAB HANDLE	7.1.31	7-34	SIDE DASHBOARD MOLDING, REMOVAL	7.1.19	7-23
REAR SUSPENSION LINKAGE	7.9.2	7-93	SIDE FAIRINGS, REMOVAL	7.1.25	7-29
SIDE DASHBOARD MOLDING	7.1.19	7-23	SIDE PANELS, REMOVAL	7.1.3	7-7
SIDE FAIRINGS	7.1.25	7-29	SIDE STAND, REMOVAL	7.1.45	7-47
SIDE PANELS	7.1.3	7-7	SIDE STAND SWITCH, CHECKING	6.8.5	6-28
SIDE STAND	7.1.45	7-47	SPARE PARTS	1.4	1-7
TAILLIGHT	7.1.30	7-34	SPARK PLUGS (MISSING SPARK)	2.7	1-17
THROTTLE BODY	4.8.1	4-14		8.3.1	8-23
THROTTLE CONTROL	7.1.12	7-17	SPECIAL TOOLS	1.8	1-15
WINDSHIELD	7.1.18	7-22		3.1.6	3-3
<b>REMOVAL</b>			SPECIFICATIONS PRODUCTS	1.5	1-7
SADDLE SUPPORT LOWER MOLDED COVER	7.1.33	7-36		1.7.1	1-11
BRAKE MASTER CYLINDER	7.4.4	7-69	SPEED SENSOR	6.10.4	6-35
BRAKE MASTER CYLINDER COMPLETE WHEEL	7.5.4	7-73	SPROCKET AND COUNTERSHAFT SPROCKET, CHECKING THE WEAR	2.35.2	1-55
	7.2.2	7-55	STARTING RELAY, CHECKING	6.8.3	6-26
	7.3.3	7-62	STARTING SAFETY OPERATING LOGIC	6.8.2	6-25
COOLANT THERMISTORS	5.4	5-7			
DASHBOARD/FRONT FAIRING MOUNT	7.1.28	7-32			
ENGINE OIL RADIATOR	7.1.47	7-49			
ENGINE OIL RESERVOIR	7.1.46	7-48			
EXHAUST PIPES	7.1.44	7-46			
EXHAUST SILENCER	7.1.43	7-45			
EXPANSION TANK	5.6	5-9			
FRAME	7.1.51	7-52			
FUEL LEVEL SENSOR	4.4	4-6			
FUEL PUMP	4.6	4-7			
FUEL RESERVOIR CAP	7.1.5	7-10			
FUEL TANK	7.1.4	7-8			
LEFT RIDER FOOTREST SUPPORT	7.1.38	7-42			
LICENSE PLATE HOLDER	7.1.36	7-40			
PASSENGER FOOTREST	7.1.37	7-41			
PASSENGER FOOTREST SUPPORTS	7.1.37	7-41			
PASSENGER SADDLE LOCK	7.1.32	7-35			
RADIATOR	5.2	5-5			

STARTING, SAFETY SYSTEM	6.8	6-24	TROUBLESHOOTING	3.1.3	3-3
STEERING	2.27	1-45		6.4.2	6-9
STEERING	2.27	1-45		6.5.1	6-12
	8.4.11	8-25		8.1	8-3
	7.6	7-74	BATTERY	8.1.3	8-8
DISASSEMBLY	7.6.1	7-75	BRAKES	8.1.4	8-9
REASSEMBLY	7.6.3	7-76	CHASSIS	8.1.5	8-9
STRUCTURE (FRAME/SADDLE SUPPORT/ DASHBOARD MOUNT)	8.4.13	8-25	ELECTRICAL SYSTEM	8.1.2	8-8
SUPPORT STANDS, POSITIONING THE VEHICLE	1.9	1-17	ENGINE	8.1.1	8-3
SUSPENSION LINKAGE, DISASSEMBLY	7.9.3	7-94	TROUBLESHOOTING IN THE ELECTRONIC SYSTEM ACCORDING TO INFORMATION	6.5.4	6-13
SWINGING ARM	2.29	1-48	TROUBLESHOOTING IN THE ELECTRONIC SYSTEM ACCORDING TO INFORMATION SHOWN ON THE DISPLAY	4.7.6	4-13
ADJUSTMENT	2.29.1	1-48			
SWITCHES	6.13.2	6-43			
SWITCHING KM/MI, L/GAL, °C/°F	2.3.5	1-9			
SWITCHING ODOMETER (MILEAGE COUNTER) TOTAL/TRIP	2.3.4	1-9			
SYNCHRONIZING THE CYLINDERS	4.10.4	4-18			
<b>T</b>	<b>Ref. Page</b>		<b>U</b>	<b>Ref. Page</b>	
TABLE OF INSTRUMENTS AND INDICATORS	2.3.7	1-10	UPPER FORK TUBE/LOWER FORK TUBE UNITS, REMOVAL DISASSEMBLY	7.7.2 7.7.3	7-78 7-79
TAILLIGHT BULBS, CHANGING	6.15.4	6-51	UPPER/LOWER FORK TUBE UNITS INSTALLATION REMOVAL DISASSEMBLY	7.7.6 7.7.2 7.7.3	7-85 7-78 7-79
TAILLIGHT, REMOVAL	7.1.30	7-34	UPPER/LOWER FORK TUBE UNIT, REASSEMBLY	7.7.5	7-83
TANK, DRAINING FUEL FROM	4.2	4-5	USING CONSUMABLES	1.7.2	1-12
TECHNICAL INFORMATION	3.1	3-3			
TECHNICAL SPECIFICATIONS	3.1.1	3-3	<b>V</b>	<b>Ref. Page</b>	
TERMINALS AND CLAMPS, CHECKING AND CLEANING	2.4.1	1-14	VALVE	5.5	5-8
TESTING THE INJECTORS	4.10.1	4-17	VEHICLE ON THE FRONT SUPPORT STAND, POSITIONING	1.9.1	1-17
THROTTLE	2.10	1-22	VOLTAGE REGULATOR, CHECKING	6.3.5	6-8
ADJUSTING CONTROL	2.10.3	1-23	<b>W</b>	<b>Ref. Page</b>	
THROTTLE BODY	4.10.2	4-17	WARNING LIGHTS AND BUZZERS	6.13 6.12	6-42 6-40
THROTTLE BODY COMPONENTS	4.8 8.4.2	4-14 8-24	WARNINGS FOR FUEL, LUBRICANTS, COOLANT AND OTHER COMPONENTS	1.2	1-3
INSPECTION	4.10	4-17	WHEEL, DISMANTLING	7.2.3	7-56
REMOVAL	4.8.1	4-14	WHEEL, DISMANTLING	7.3.5	7-64
DISASSEMBLY	4.9	4-16	WHEEL, RE-INSTALLING 7-66	7.2.5	7-58, 7.3.7
THROTTLE BODY COMPONENTS	8.4.2	8-24	WHEEL SPOKES, ADJUSTING THE TENSION	7.2.1	7-54
THROTTLE CONTROL			WHEEL SPOKES TENSION, ADJUSTING	7.3.1	7-60
REMOVAL	7.1.12	7-17	WHEELS	8.4.8	8-25
TESTING OPERATION	2.10.1	1-22	WINDSHIELD, REMOVAL	7.1.18	7-22
THROTTLE CONTROL CABLES	8.2.7	8-15	WIRE COLORS	6.2.1	6-5
THROTTLE VALVE POTENTIOMETER	4.10.3	4-17	WIRING	8.2	8-11
THROTTLE VALVES, SENSOR ALIGNMENT	4.10.6	4-21	WIRING DIAGRAM		
TIGHTENING NUTS AND BOLTS	2.40	1-60	ETV MILLE CAPONORD	6.19	6-55
TIGHTENING TORQUES	3.1.7	3-3	FUEL PUMP SYSTEM	6.7.1	6-22
GENERAL SPECIFICATIONS	1.11	1-21	LIGHT SYSTEM	6.11.1	6-38
TIRES	2.36	1-58			
TRANSFERS, APPLICATION INSTRUCTIONS	1.10	1-19			



WARNING LIGHTS AND BUZZERS	6.13.1	6-42
	6.12.1	6-40
DASHBOARD INDICATORS	6.10.1	6-32
WIRING DIAGRAM		
IGNITION SAFETY SYSTEM	6.8.1	6-24